


JENSEN®

Elite-606

140 Watt Powered Subwoofer

Congratulations on investing in one of JENSEN's finest Subwoofer Systems. You will find this information valuable for the long term enjoyment of your Elite-606 Sub.

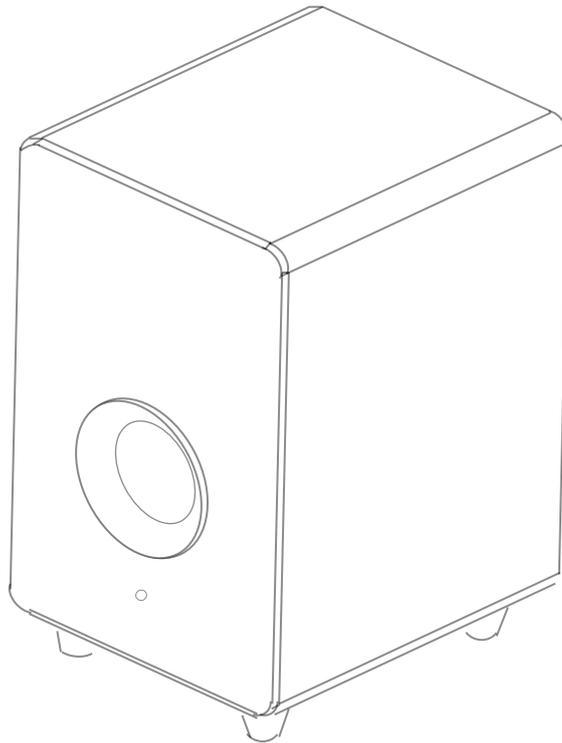

Check for damage: We know you will be eager to install your new Elite-606 Subwoofer, however, please firstly inspect your unit for any damage. If you find a problem please contact us immediately at info@bdimports.com.au . Also, do not forget to Register your 5 Year Warranty (1 Year on amplifier) Online by visiting www.jensenspeakers.com.au

Break in Period: Premium grade parts and materials are used in your Elite-606 products. **Break In period is appx 10-20 playing hours** after which time Bass will deepen and tighten. There is no need to limit playback volume at all during this time.

Your Elite-606 Is an integrated Active Subwoofer System with an 8" Heavy Duty "Monster" driver powered by an on-board 140 Watt RMS amplifier. You may string additional JENSEN Elite-606's together if so desired by connecting to the "Line Output" section of your JENSEN Elite-606 amplifier (see "For Big Bass Lovers" section below).

Elite-606

WD-140 amplifier module features.

GAIN: (Volume knob). This adjusts the output of your JENSEN Elite-606 to balance and harmonize with output from your Front / Center etc. etc. speakers. DO NOT set this on maximum. Be careful not too advance this control too far as overload may occur causing damage to your JENSEN Elite-606 speaker (see below setting recommendations).

FREQ: (frequency knob). This control adjusts how deep (low frequency) you wish your JENSEN Elite-606 to operate at. In other words, 70 Hz is a lower and deeper frequency than 90Hz, so if you set at 70Hz you will be amplifying all music information **70Hz and below** this frequency and filtering out everything above which is the ideal intention of a Powered Subwoofer. Take care not to advance this control too far as overloading may occur (see below recommendations).

ON/AUTO/OFF: **Blue** LED is ON and **RED** LED is standby (sleep). We recommend setting to **AUTO** which is a set-and-forget mode. Your JENSEN Elite-606 automatically activates when it senses an incoming signal. After signal has been removed between 15 and 40 minutes, amplifier will revert to Standby mode and LED will change to Red.

LOW LEVEL OUTPUT: Are provided for adding additional JENSEN Elite-606 using an additional 1RCA to 1 RCA lead. You may add as many JENSEN Elite-606's as you like (see "**For Big Bass Lovers**" below).

LOW LEVEL INPUT: Connect from your Multi Channel Receiver (5.1, 6.1 etc. etc) using RCA Cord to this/these sockets. These are internally paralleled so connecting to one or both sockets makes no difference. (See Option A below).


Phase Control Switch is only used if several speaker boxes are in the one room (i.e. Center Speaker, Surrounds etc.). This Phase switch can be set to ensure the Elite-606 woofer is "in phase" with all other woofers operating together in the same room so that Bass cancellation does not occur. When your entire speaker system is completely set-up, flick this switch from "NOR" to "REV" and leave on setting that provides the most Bass. This will be the best setting and be correctly "in phase". Leave switch on "NOR" if no audible increase is detected.

HI-LEVEL IN / HI-LEVEL OUT Only use these Red/Black Speaker Lead terminals if using a STEREO amplifier. Simply, your JENSEN Elite-606 connects between your Stereo amplifier and Speakers. To do this run pair Speaker Leads from Stereo amplifier into JENSEN Subwoofer (**Hi Level In**) then run a second pair Speaker Leads from JENSEN Subwoofer (**Hi Level Out**) to Speakers. With this connection, full frequency will always be delivered to Speakers so you are adding 140 Watts of Bass to your Speaker System (see Option B below).

Connections


Option A. Connecting from a Multi-Channel Receiver:

Connect 1xRCA to 1xRCA lead (not supplied) from SUB-OUT on your Receiver to “LOW LEVEL INPUT on Elite-606 Subwoofer. Connect to either L or R as both are internally paralleled and make no difference. These leads are available in 1,3,5,10 and 20 meter lengths. Unlike speaker leads, you do not lose power by increasing lead lengths.

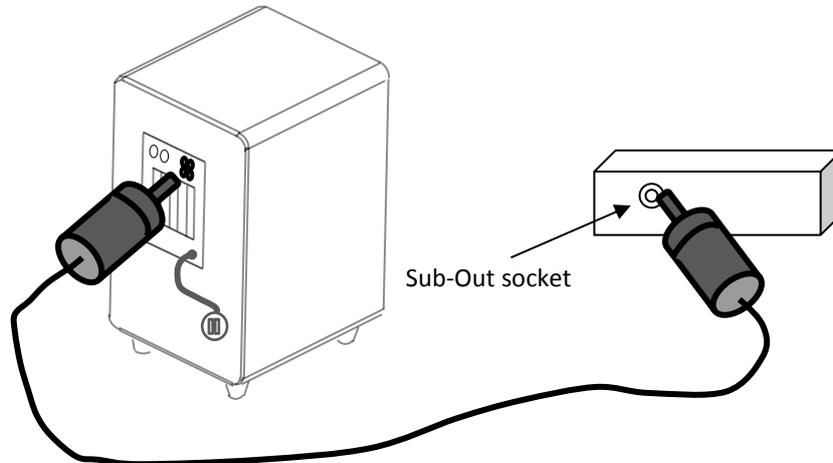

Option B. Connecting from a Stereo amplifier:


To add a Subwoofer to your existing Stereo amplifier, Connect Left and Right Speaker Leads (not supplied) from Speaker Terminals on your amplifier to Left and Right Speaker Terminals on your Elite-606 marked “HI LEVEL IN”. Then connect a second pair Speaker Leads from “HI LEVEL OUT” to Front Left and Right speakers. In this case, full frequency and power continues through your Elite-606 Sub, to your Speakers.

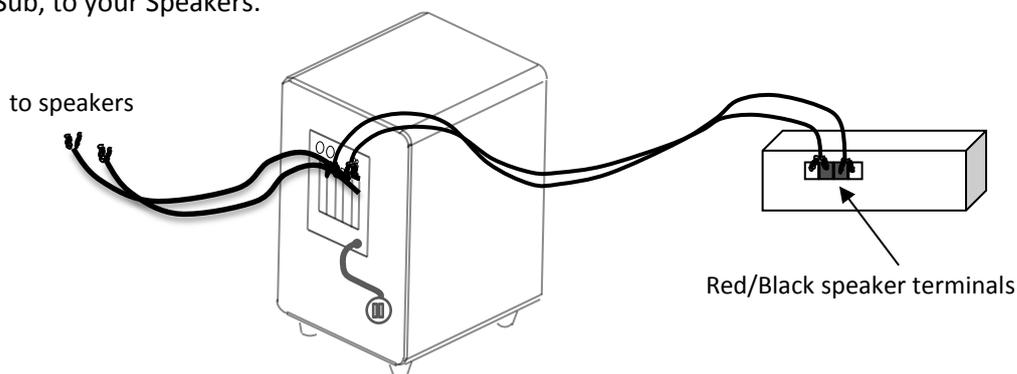

Where should I set Level & Frequency Control Knobs ?? Once you have your Elite-606 positioned and connected, we suggest experimenting with the Gain and Frequency knobs to suit the Volume and depth of Bass desired. Initially, for Hi-Fi listening, try setting the **Level Control at 11 o'clock** and the **Frequency Control at 70Hz (10 o'clock)**. This is the most popular setting. This setting will boost Bass information 70Hz and below – which is deep, deep Bass at a strong (but not overpowering) level. For Home Theatre listening (movies), increase the **Level Control to 1 o'clock** and lower the **Frequency Control to 60 Hz (9 o'clock)**. This will enormously enhance all Bass information 60Hz and below to a boosted Bass setting so when dinosaurs, earthquakes and explosions kick-in, **they kick in !!** Refrain from turning Level Control beyond 1 o'clock as Bass will then overpower all other music. Also, overpowering may incur amplifier damage, Cone damage or both.

For Big Bass Lovers: With the purchase of a single 1xRCA to 1xRCA lead **extra** Elite-606's can be "daisy-chained" together and operate as one. Each will need to plug into power. All rooms have acoustic sweet spots as well as dead-spots. Adding an extra Elite-606 Subs will remove the dead-spot as well as adding Bass resulting in **exponentially enhancing** overall Sub-Bass performance. In this case 2 x JENSEN Elite-606's will perform like 3. And 3 will perform like 5 etc. Switch them all to "**AUTO**" and they can all be left on indefinitely and activate together when an incoming signal is sensed. Front panel LED's will all turn Blue and ... **AWMEGAAAWD !!**. Add two, three or as many as you are game.

From AMP

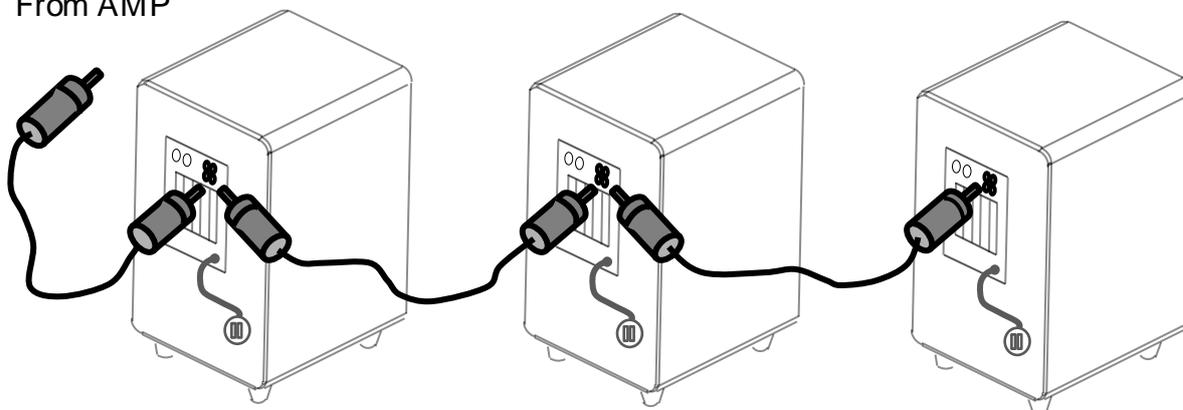

Warranty. Your JENSEN Elite-606 is covered under Warranty for 5 Years (1 Year on amp module) and you must Validate your Warranty Online at www.jensenspeakers.com.au For help, contact us at info@bdimports.com.au or you can find closest Service Dept. at www.jensenspeakers.com.au

Troubleshooting: Electrical storms and Power surges can blow the **fuse** of your Subwoofer. Symptom for this occurring is "DEAD LED". If the **LED light on front panel does not shine BLUE** (on) or **RED** (standby) then you may simply need to **replace the fuse**. This is located, along with a spare fuse, just below Power Cord input on rear panel. Replace this with a 0.8 Amp Fast Blow fuse. Most hardware and electrical suppliers will have this standard type of fuse. **Humm** issues can sometimes be solved over the phone **1300 - JENSEN** or at info@bdimports.com.au

Spex:

Description	Power Output	SPL	Frequency Response	Driver	Dimensions	Kg	Colors	Warranty
8", 140 Watt Powered Subwoofer	140 Watt RMS	BIG !	20-200Hz	Monster 8" Sub Driver	(H) 460 (W) 277 (D) 355	14 Kg	Hi-Gloss Black or Hi-Gloss White	5Years (1 on amp module)

Notes:

I must not forget to
Register On-Line
to validate my
5 Year Warranty at
www.jensenspeakers.com.au

BD Imports Pty Ltd Customer Support 24/7

info@bdimports.com.au 1300-JENSEN (1300-536736) www.jensenspeakers.com.au

Distributed in Australia by B.D Imports Pty Ltd. Victoria, Australia under license from Voxx, NY, USA.