JENSEN®

Explosive Home Theater

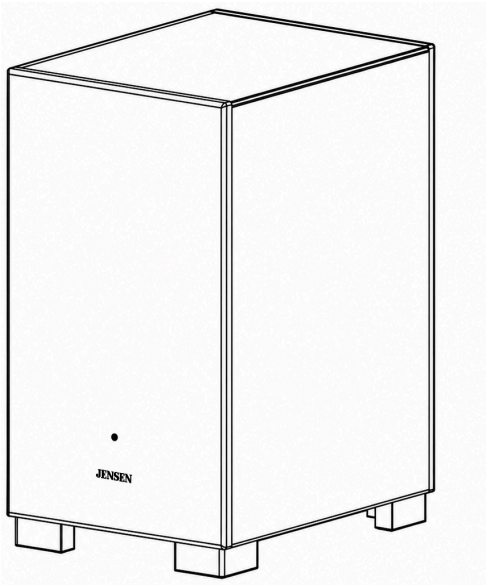

EHT-707 Subwoofer

Deep, powerful bass you hear—and feel. From roaring dinosaurs to rumbling earthquakes, the EHT-707 puts you right in the scene.

Subwoofer Placement

Your EHT-707 can sit on display, be hidden behind the couch, or be built into cabinetry. Bass response can vary with positioning for your room, so try a few positions to find the bass that suits your ears.

For an in-cabinet installation, sitting the subwoofer on the floor with the cabinet built around it gives the best results and helps avoid cabinet vibration.

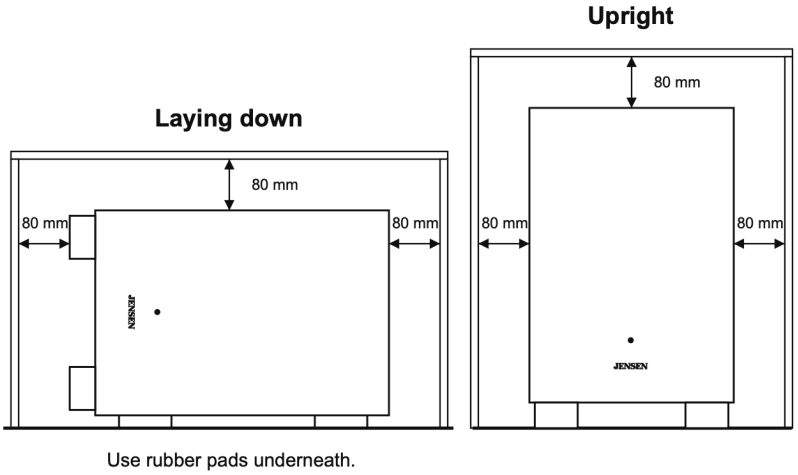

Tips

1. For best results, sit the subwoofer directly on the floor, even inside cabinetry. This helps reduce cabinet vibration.
2. Leave at least 80 mm above and on each side. More space is better.
3. Leave at least 100 mm behind the amplifier for ventilation.
4. If laying the subwoofer on its side, place four non-slip rubber pads underneath, one near each corner, to prevent “walking”.

Quick Setup

Before you connect

Switch off the subwoofer and the source equipment before connecting cables. Before connecting mains power in Australia, check that the rear voltage selector is set to 220–240 V. Keep the unit dry and its ventilation clear.

1. Connect subwoofer

Use a shielded 75-ohm RCA male-to-male subwoofer cable to connect your receiver's SUB OUT 1 to the EHT-707's LOW LEVEL INPUT (L). Choose a length that reaches comfortably. Cable is not supplied but is widely available from electronics retailers, hi-fi stores and online.

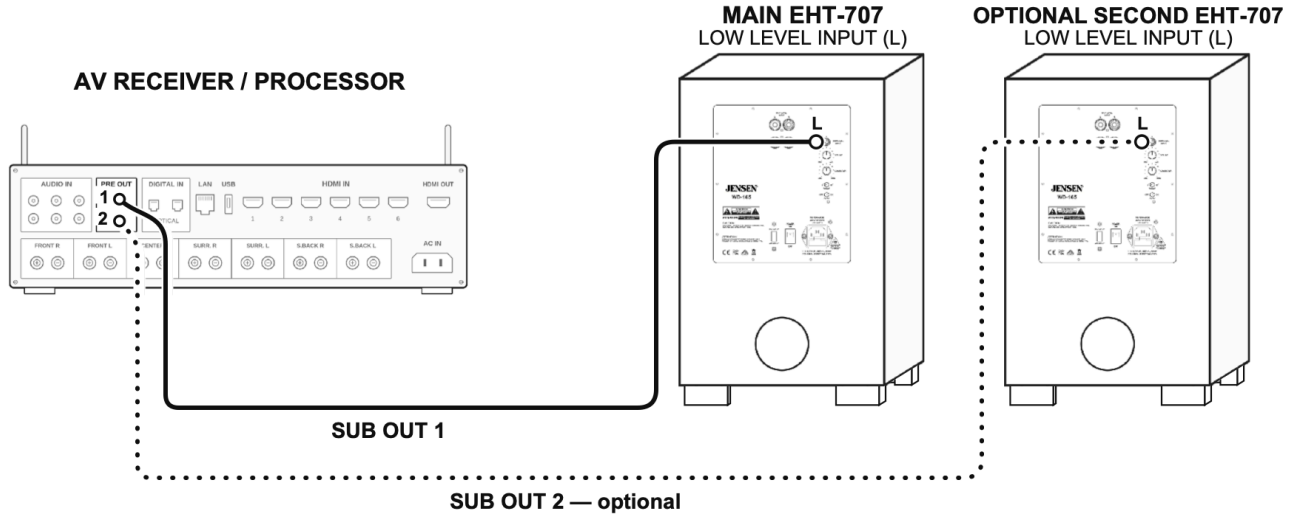

More than one subwoofer?

For larger rooms or dedicated home theaters, multiple EHT-707s turn up the intensity, with harder-hitting bass that puts you right in the scene. Follow the dotted SUB OUT 2 connection above, using a separate cable.

2. Set the controls

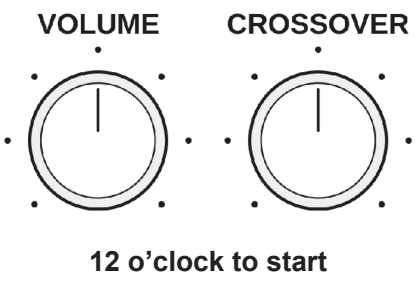

PHASE	0°
POWER	ON
OFF / AUTO / ON	ON while running setup; AUTO afterwards (if using often)

3. Run your receiver's setup

Follow your AV receiver's speaker setup or automatic calibration instructions, then review the results and adjust if needed. Use the receiver for normal volume and source adjustments.

If you change any settings or placement, run your receiver's calibration again.

Connections & Controls

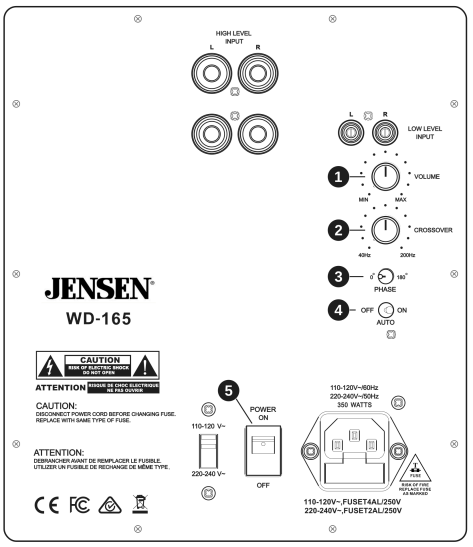

1. VOLUME Balances the bass with your main speakers. Start at 12 o'clock. Do not start at maximum. Reduce the volume if you hear distortion.

2. CROSSOVER Sets the upper bass limit (40–200 Hz). Start at 12 o'clock. You can adjust this later to suit your preference.

3. PHASE Start at 0° and listen from your usual seating position. Then try 180° and keep the setting that gives fuller bass. Leave it at 0° if there's no clear difference.

4. OFF / AUTO / ON Use ON for setup and AUTO for everyday listening. AUTO wakes the subwoofer when it detects an audio signal and returns it to standby when no signal is detected.

5. POWER The rocker switches the amplifier's power on or off. Unplug the power cord when the unit will not be used for a long period.

Troubleshooting

No sound	Check the power cord, POWER switch and audio cable. Confirm the source is playing, the receiver's subwoofer output is enabled, and VOLUME is not at minimum.
No front light	Check the mains outlet, power cord and POWER switch. Switch off and unplug the subwoofer before checking the fuse. The specifications are marked on the fuse.
No bass in AUTO	Temporarily move the OFF/AUTO/ON switch to ON and play the same source again.
Hum or unwanted noise	Check for loose or damaged signal cables. Switch the equipment off before changing connections. Try another RCA cable and contact JENSEN if the problem continues.

Specifications

Model	EHT-707 active subwoofer with WD-165 amplifier
Amplifier output	165 W RMS / 300 W maximum
Driver	10-inch *MONSTER* extreme-throw woofer
Frequency response	20–200 Hz
Dimensions (H × W × D)	500 × 320 × 445 mm including protruding ports
Weight	18 kg
Subwoofer Warranty	5 years (amplifier 2 years)

Warranty & Support

Bought directly from JENSEN? Your warranty is automatically registered. There's nothing more you need to do. Bought elsewhere? Register at www.JensenSpeakers.com.au.

Need help planning, placing or playing your subwoofer? Contact JENSEN's sound advice team:

support@JensenSpeakers.com.au
1300 JENSEN (1300 536 736)
www.JensenSpeakers.com.au

Distributed in Australia by Audile Acoustics P/L ATF Audile Acoustics Trust,
under licence from Voxx International Corporation, USA.